

FEUCHTE- TEMPERATURSENSOR FTS2




Die Montage darf nur durch eine Elektrofachkraft oder eine vergleichsweise qualifizierte Person ausgeführt werden.


1. Anordnung:

150 mm
Temperaturfühler F1
im Bereich oberhalb
des Heizsystems

Heizsystem
Verdampfer

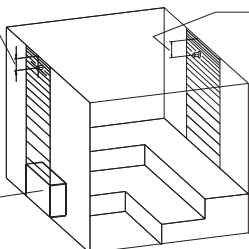

150 mm
Feuchte- Temperatur
Sensor FTS II

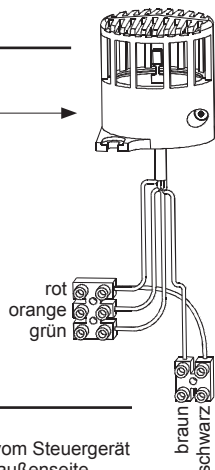



2. Montage:

1. Schritt:

Mittig eines Kabinenwandbrettes
ein Loch \varnothing 30 - 40 mm bohren.
150 mm Abstand zur Decke
einhalten.


2. Schritt:

Anschlussleitung (5-polig) vom Steuergerät
kommend von der Kabinenaußenseite
durch das Loch führen. Mit den Klemmen
verbinden und sichern.

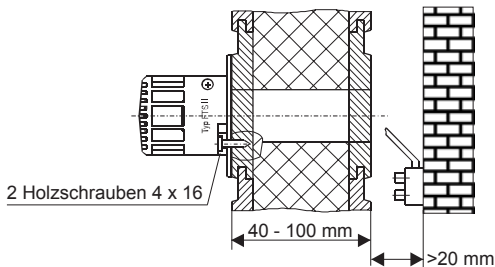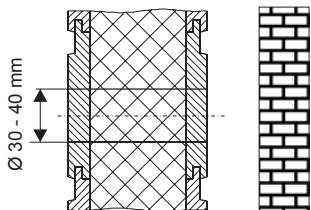


3. Anschluss:

Pro B3, Pro C3, Just Sauna combi, Pro D3(i)

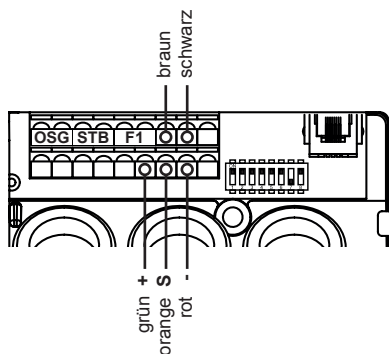

Saunasteuerung home.com4

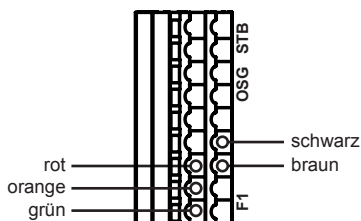

HUMIDITY- TEMPERATURE SENSOR FTS2




Installation may only be performed by a qualified electrician or similarly qualified person.


1. Arrangement:

150 mm
Temperature sensor F1
in the area above the
heating system

Heating system
Evaporator

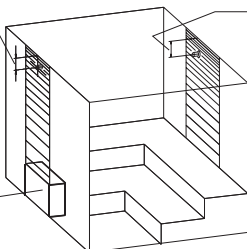

150 mm
Humidity- Temperature
sensor FTS II

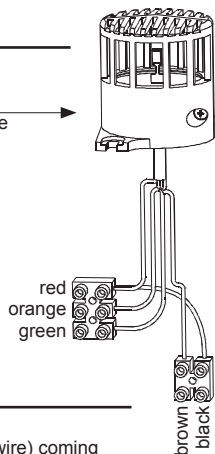



2. Installation:

1. Step:

Drill a hole \varnothing 30 - 40 mm in the middle of a cabin wall panel. Keep 150 mm distance to the ceiling.


2. Step:

Pull the connecting line (5-wire) coming from the control unit through the hole from the outer side of the cabin. Connect and secure with the sensor system plug.

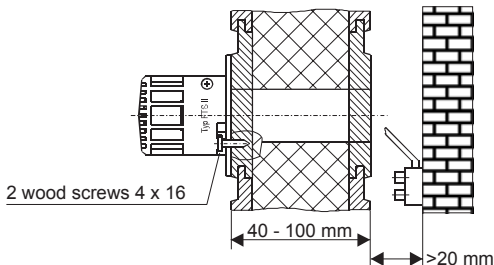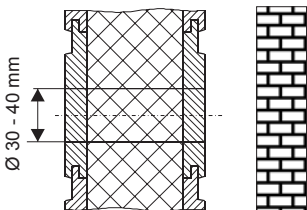

3. Connection:

Pro B3, Pro C3, Just Sauna combi, Pro D3(i)

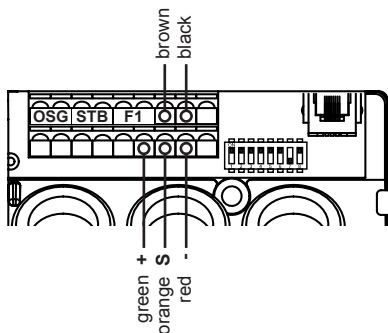

Sauna control home.com4

